GB

TABLE OF CONTENTS

DESCRIPTION OF THE APPLIANCE	Page 9
BEFORE USING THE FREEZER	Page 9
PRECAUTIONS AND GENERAL SUGGESTIONS	Page 10
HOW TO OPERATE YOUR FREEZER	Page 10
HOW TO DEFROST AND MAINTAIN THE FREEZER	Page 11
TROUBLE SHOOTING GUIDE	Page 13
AFTER-SALES SERVICE	Page 13
INSTALLATION	Page 14
DOOR REVERSIBILITY	Page 14

To get full satisfaction of your appliance, please read carefully your instruction manual.

Customer Care Line

(Local) London ***081-649-8989***

Outside London ***0345-898989***

DESCRIPTION OF THE APPLIANCE

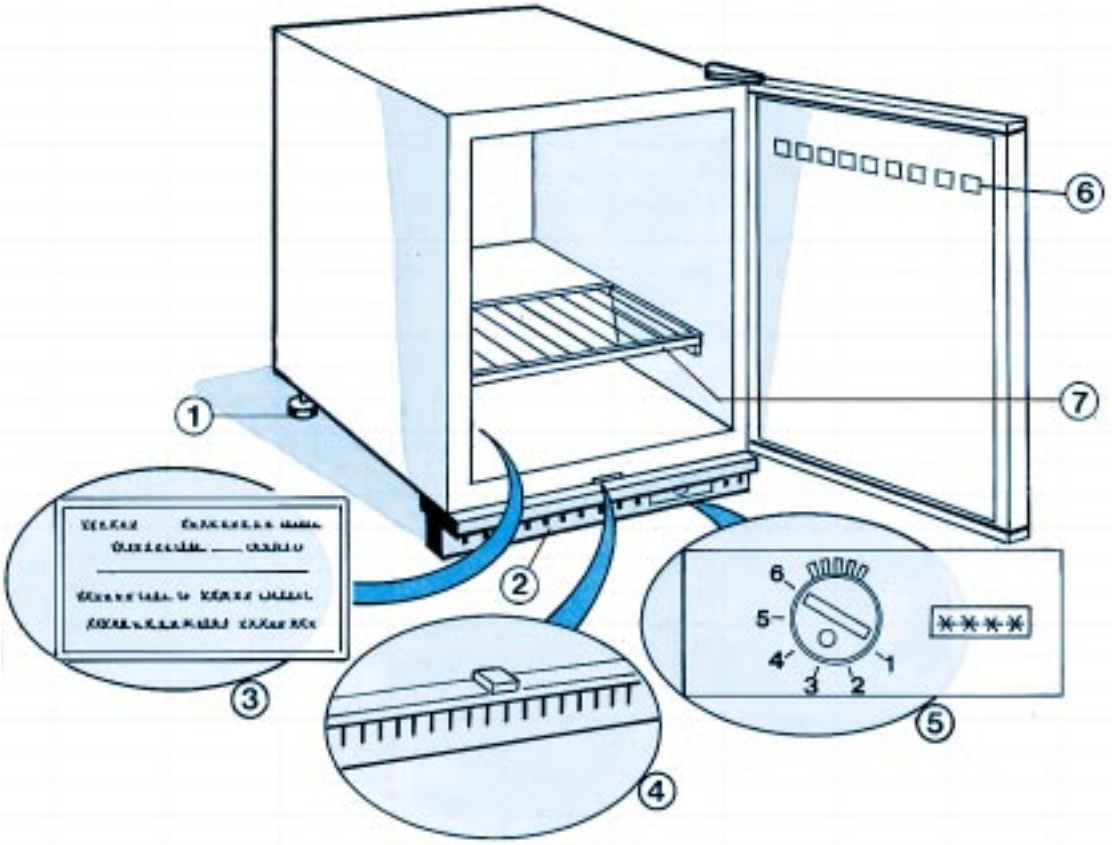

1. Adjustable feet
2. Plinth
3. Rating plate
4. Defrost drain
5. Thermostat control knob
6. Food storage calendar
7. Shelf

BEFORE USING THE FREEZER

- After unpacking, please ensure that the appliance is undamaged and that the door closes tightly.
  Any damage must be reported to your dealer within 24 hours of receipt of the appliance.
- The package is recyclable and is marked with the recycling symbol ♺.
- The appliance is built with re-usable material. When scrapping, follow the local environmental protection regulations. Render the freezer inoperative by cutting the power-cable off and take the freezer to the local disposal centres so that refrigeration compounds be properly treated to avoid any air pollution.
- Please ensure that the installation and the electrical connection has been carried out following the manufacturerts instructions and in compliance with local safety regulations.

PRECAUTIONS AND GENERAL SUGGESTIONS

- Only use the freezer for the storage of frozen food and for freezing fresh food.
- After installation, please make sure that the freezer does not stand on the supply cord.
- Do not store glass containers with carbonated drinks in the freezer as they may explode.
- Do not eat ice cubes or ice lollies immediately after their removal from the freezer, as they may cause "cold" burns.
- Before any cleaning or maintenance operation, disconnect the freezer by switching off the electricity at the mains or by pulling the plug.

Conformity declaration

- This appliance incorporates parts intended to come into contact with foodstuffs in compliance with EEC directive 89/109.
- This appliance conforms to EEC directive 87/308 on radio-interference.

Information

This appliance is free of HCFC's (refrigerant circuit contains R 134 a) or free of HFC's (refrigerant circuit contains R 600 a - Isobutane). For more details, please refer to the rating plate on the appliance.

For appliance with Isobutane (R 600 a)

The refrigerant Isobutane is a natural gas of high environmental compatibility but which is inflammable. Therefore, it is essential to ensure that the ducts of the refrigerant circuit do not get damaged.

HOW TO OPERATE THE FREEZER

STORAGE OF FROZEN FOODS

1. The internal temperature is controlled by the thermostat. Higher numbers correspond to colder temperatures.
   Turn the thermostat control knob to position 3 to obtain the correct storage temperature. Under normal conditions (ambient temperature included between +20°C and +25°C) we recommend that you kept your food frozen at that setting.
2. Load frozen inside the freezer. Before using it for the first time, operate the freezer empty for two to three hours.

Information on frozen foods

When buying frozen food, make sure that:

1. Wrapper or packet is intact as the food may deteriorate. If a package bulges or sags or has spots of moisture on it, it may not have been kept cold enough and the contents may have lost their original quality.
2. Use thermical bags or cold boxes for transport.
3. Frozen food should be purchased last.
4. When at home, store them in the freezer immediately.

Important

- Any food, even if partially thawed, cannot be re-frozen but must be eaten within 24 hours.
- Any appreciable rise in temperature of frozen food may shorten the storage life indicated on the package.
- Always follow instructions on the package to store frozen food.

FREEZING FRESH FOOD

This appliance, marked by the ✱✱✱ symbol, allows freezing of a given quantity of fresh food up to an ambient temperature of +32°C.
The quantity of fresh food which can be frozen at an ambient temperature of +25°C in a 24/h period is stated on the rating plate.

How to operate

①. 24 hours prior to freeze fresh food, set the thermostat control knob to position □□□□□ (see opposite figure).

2. Wrap and seal food in:
- aluminium foil;
- plastic-coated paper;
- non-permeable plastic wraps;
- polyethylene containers with tight fitting lids;
- freezing jars.

Air or moisture must not be allowed in or out the package.

3. Place food in the lower section of the freezer under the direct contact with the walls, while having enough space for air to circulate around packages.
Be careful to leave enough room at the front so the door can close tightly.

④. 24 hours later, at completion of freezing, set the thermostat control knob to the normal setting 3 (-18°C).

Storage time of frozen food

Storage time will vary according to the quality of the food, the type of packaging or wrap used and the storage temperature (see chart located on the inner door).

①

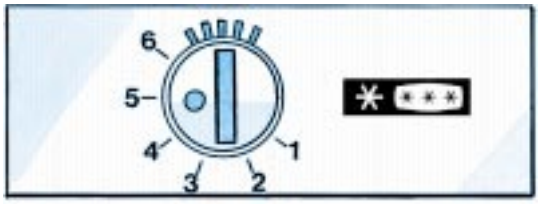

④

HOW TO DEFROST AND MAINTAIN YOUR FREEZER

We suggest you defrost your freezer once ice build up reaches about 3 mm in thickness.

1. 24 hours prior to defrosting, set the thermostat control knob to position 6 so that food can reach the coldest temperature.
2. Remove food from the freezer, wrap them into several layers of newspaper and put them into the refrigerator or in a cold place.
3. **Disconnect the appliance from the mains supply.**
4. Leave the freezer door open.

⑤. Place a basin under the defrost drain to collect the defrost water.

6. When the ice starts to melt, you can accelerate defrosting by scraping the inner walls with the plastic scraper supplied with the freezer.
   Do not use sharp or cutting instruments to scrape the ice off. Any damage caused to the appliance, is not covered by the guarantee.
7. Clean the inside of the freezer with a sponge dampened in a solution of warm water and vinegar. **Do not use abrasives, detergents or soaps.**
8. Rinse and dry carefully.
9. Reconnect the appliance to the mains.
10. Operate the freezer for 2 to 3 hours prior to loading food and leave the thermostat control knob to position 6.
11. After 24 hours, set the thermostat control knob to its usual operating position 3.

- Clean the inside when defrosting.
- Clean the outside with a soft cloth dampened in water.
- Periodically clean the condenser (radiator) situated at the rear of the freezer and the plinth with a vacuum cleaner or a brush.

For prolonged absences

1. Empty all items from the freezer.
2. Disconnect it from the mains.
3. Defrost and clean the inside.
4. Leave the door open to prevent any bad odour.

⑤

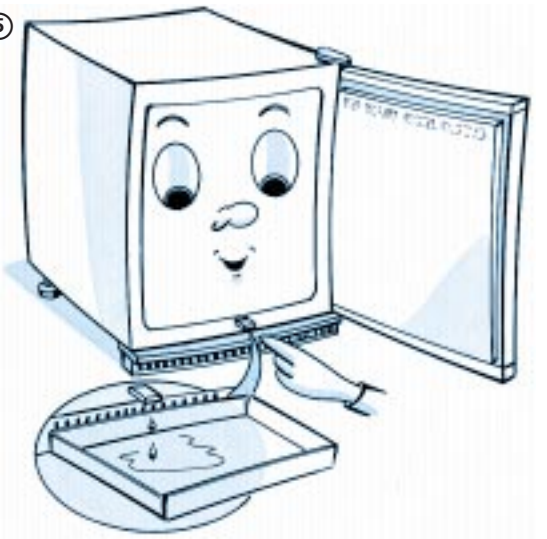

Condensation

If the freezer is installed in humid or badly ventilated rooms (cellar, garage) under particular humidity conditions (higher than 85%) there may be some condensation forming on the appliance walls.
In extreme cases, you may notice water droplets. This phenomena does not affect the operation and the performance of the appliance.

Power failure

If it is expected to last more than 12 hours: leave the food in the freezer and keep the door shut.
If it lasts more than 12 hours and any food start to thaw, try to use it as soon as possible or cook and refreeze it.

TROUBLE SHOOTING GUIDE

1. The temperature in the compartment is not cold enough

- Is the food preventing a proper door closing?
- Is the freezer too close to a heat source?
- Are the condenser and the plinth clean?
- Is the layer of frost on the walls too thick?
- Is the ambient temperature too low (lower than +15°C)?
  In this case, it may be useful to set the thermostat control knob towards position 6 to allow the compressor to work longer and provide the adequate storage temperature.

If after these checks, the temperature remains warm, please contact our After Sale Service and keep the freezer door closed.

2. The compressor works continuously.

- Is the thermostat control knob set to position 6?
- Is the ambient temperature too warm (higher than +32°C)?
- Did you open the door frequently?

3. The freezer does not operate.

- Is there a power failure?
- Is the freezer well plugged?
- Is the fuse blown?
- Is the supply cord broken?

For Great Britain only

Check that the plug fuse is well fitted. A 13 A fuse must be used.
Check removable plugs for loose connections and tighten them if necessary. Loose connections can overheat the plug.

4. The freezer is excessively noisy.

- Is the freezer in contact with other furniture or appliances?
- Are the parts in the back in contact with each other?

Attention: Under normal conditions, the cooling system of the freezer may cause some noise.

AFTER-SALES SERVICE

Before calling for Service:

1. Check the Trouble-Shooting Guide carefully to see if you can correct the fault yourself.

2. Re-operate the appliance to check if the fault has cleared itself.

If both attempts fail, please call for Service. Describe the fault and give the model N° and Service N° of your appliance, your address and phone N°.

- Do not install the freezer close to any heat source.
- Place it in a dry and well ventilated space.
- Make sure that the appliance is well levelled and adjust the rear feet, if necessary.
- Never cover the plinth. You must leave at least a 50 mm gap, if the appliance is installed under a kitchen furniture.
- Fit the shelves inside the appliance.
- Let the appliance stand for 1 hour prior to connecting it to the electricity supply.

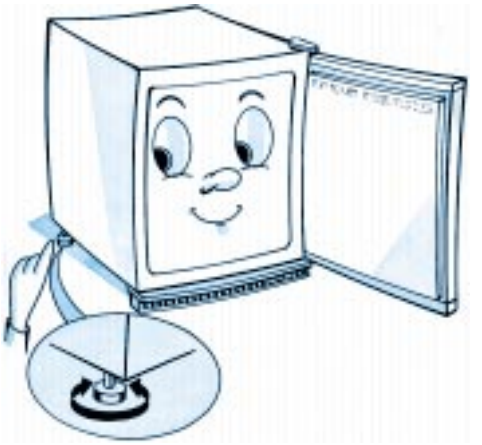

Electrical connection

- Check that the voltage on the rating plate corresponds to the voltage in your home.
- **The earthing of the freezer is compulsory by law.**
  The Manufacturer will accept no liability for damage to persons or to objects arising from the non-observance of this requirement.
- If the plug and the wall socket do not comply, have the socket replaced by a qualified technician.
- Do not use adapters, multipole sockets or extension cords.

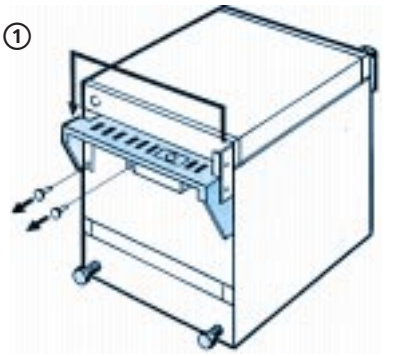

Door reversibility

①. Remove the plinth unscrewing 6 screws and the electrical housing unscrewing 2 screws.

2. Tilt the appliance backwards and remove the lower right hinge.

③. Remove the door from the pin of the top hinge.

4. Remove the screw cover, the screws and the top right hinge.

5. Remove the 3 clips covering the holes of the left screws.

6. Fix the hinge to the top left hand side, using the same screws to tighten it.

7. Reposition the clips and the screws cover in the relevant holes.

8. Fit the door in the pin of the top hinge.

⑨. Mount the lower hinge on the left hand side in the holes already provided on the appliance.

10. Retighten the plinth and the electrical housing into position.